

Installation and Operating instruction

C9900-Mxxx

Built-in EtherCAT button module

Version: 1.0
Date: 2018-09-19

BECKHOFF

Table of contents

1 Foreword	5
1.1 Notes on the documentation.....	5
1.2 Safety instructions	6
2 Transport and unpacking	7
2.1 Transport	7
2.2 Unpacking.....	7
3 Product description	8
3.1 Product overview	8
3.2 Connections.....	9
3.2.1 Power supply	9
3.2.2 EtherCAT IN/OUT	9
3.2.3 Emergency stop connection	10
3.3 Connection cable	10
3.3.1 Power cable with 90° 4-pin round connector	10
3.3.2 Power cable with 4-pin round connector.....	11
3.3.3 Power supply plug	11
3.3.4 Sensor cable (for emergency stop).....	11
3.3.5 Sensor cable 90° (for emergency stop)	12
3.3.6 M12 EtherCAT cable for (highly) flexible applications	12
3.4 Accessories	12
3.4.1 Torque wrench.....	12
3.5 TwinCAT System Manager.....	13
3.5.1 C9900-M993.....	15
3.5.2 C9900-M994	16
3.5.3 C9900-M995	17
3.5.4 C9900-M997	18
3.5.5 C9900-M899	19
4 Mounting	20
4.1 Mounting the clamp straps	20
4.2 Mounting the push-in strips	21
4.3 Push-in strips.....	22
5 Dimensions	23
5.1 C9900-M899	23
5.2 C9900-M993	24
5.3 C9900-M994	25
5.4 C9900-M995	26
5.5 C9900-M997	27
6 Technical data	28
7 Support and Service	30

1 Foreword

1.1 Notes on the documentation

This description is only intended for the use of trained specialists in control and automation engineering who are familiar with the applicable national standards.

It is essential that the documentation and the following notes and explanations are followed when installing and commissioning the components.

It is the duty of the technical personnel to use the documentation published at the respective time of each installation and commissioning.

The responsible staff must ensure that the application or use of the products described satisfy all the requirements for safety, including all the relevant laws, regulations, guidelines and standards.

Disclaimer

The documentation has been prepared with care. The products described are, however, constantly under development.

We reserve the right to revise and change the documentation at any time and without prior announcement. No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams and descriptions in this documentation.

Trademarks

Beckhoff®, TwinCAT®, EtherCAT®, EtherCAT P®, Safety over EtherCAT®, TwinSAFE®, XFC® and XTS® are registered trademarks of and licensed by Beckhoff Automation GmbH.

Other designations used in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owners.

Patent Pending

The EtherCAT Technology is covered, including but not limited to the following patent applications and patents:

EP1590927, EP1789857, DE102004044764, DE102007017835

with corresponding applications or registrations in various other countries.

The TwinCAT Technology is covered, including but not limited to the following patent applications and patents:

EP0851348, US6167425 with corresponding applications or registrations in various other countries.

EtherCAT 

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany

Copyright

© Beckhoff Automation GmbH & Co. KG, Germany.

The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization are prohibited.

Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

1.2 Safety instructions

Safety regulations

Please note the following safety instructions and explanations!
Product-specific safety instructions can be found on following pages or in the areas mounting, wiring, commissioning etc.

Exclusion of liability

All the components are supplied in particular hardware and software configurations appropriate for the application. Modifications to hardware or software configurations other than those described in the documentation are not permitted, and nullify the liability of Beckhoff Automation GmbH & Co. KG.

Personnel qualification

This description is only intended for trained specialists in control, automation and drive engineering who are familiar with the applicable national standards.

Description of symbols

In this documentation the following symbols are used with an accompanying safety instruction or note. The safety instructions must be read carefully and followed without fail!

DANGER

Serious risk of injury!

Failure to follow the safety instructions associated with this symbol directly endangers the life and health of persons.

WARNING

Risk of injury!

Failure to follow the safety instructions associated with this symbol endangers the life and health of persons.

CAUTION

Personal injuries!

Failure to follow the safety instructions associated with this symbol can lead to injuries to persons.

NOTE

Damage to the environment or devices

Failure to follow the instructions associated with this symbol can lead to damage to the environment or equipment.



Tip or pointer

This symbol indicates information that contributes to better understanding.

2 Transport and unpacking

2.1 Transport

Despite the robust design of the unit, the components are sensitive to strong vibrations and impacts. During transport the device must therefore be protected from mechanical stress. Therefore, please use the original packaging.

NOTE



Risk of damage to the device

If the device is transported in cold weather or is exposed to extreme variations in temperature, make sure that moisture (condensation) does not form on or inside the device.

2.2 Unpacking


Proceed as follows to unpack the unit:

1. Remove packaging.
2. Do not discard the original packaging. Keep it for future relocation.
3. Check the delivery for completeness by comparing it with your order.
4. Please keep the associated paperwork. It contains important information for handling the unit.
5. Check the contents for visible shipping damage.

If you notice any shipping damage or inconsistencies between the contents and your order, you should notify Beckhoff Service.

3 Product description

3.1 Product overview

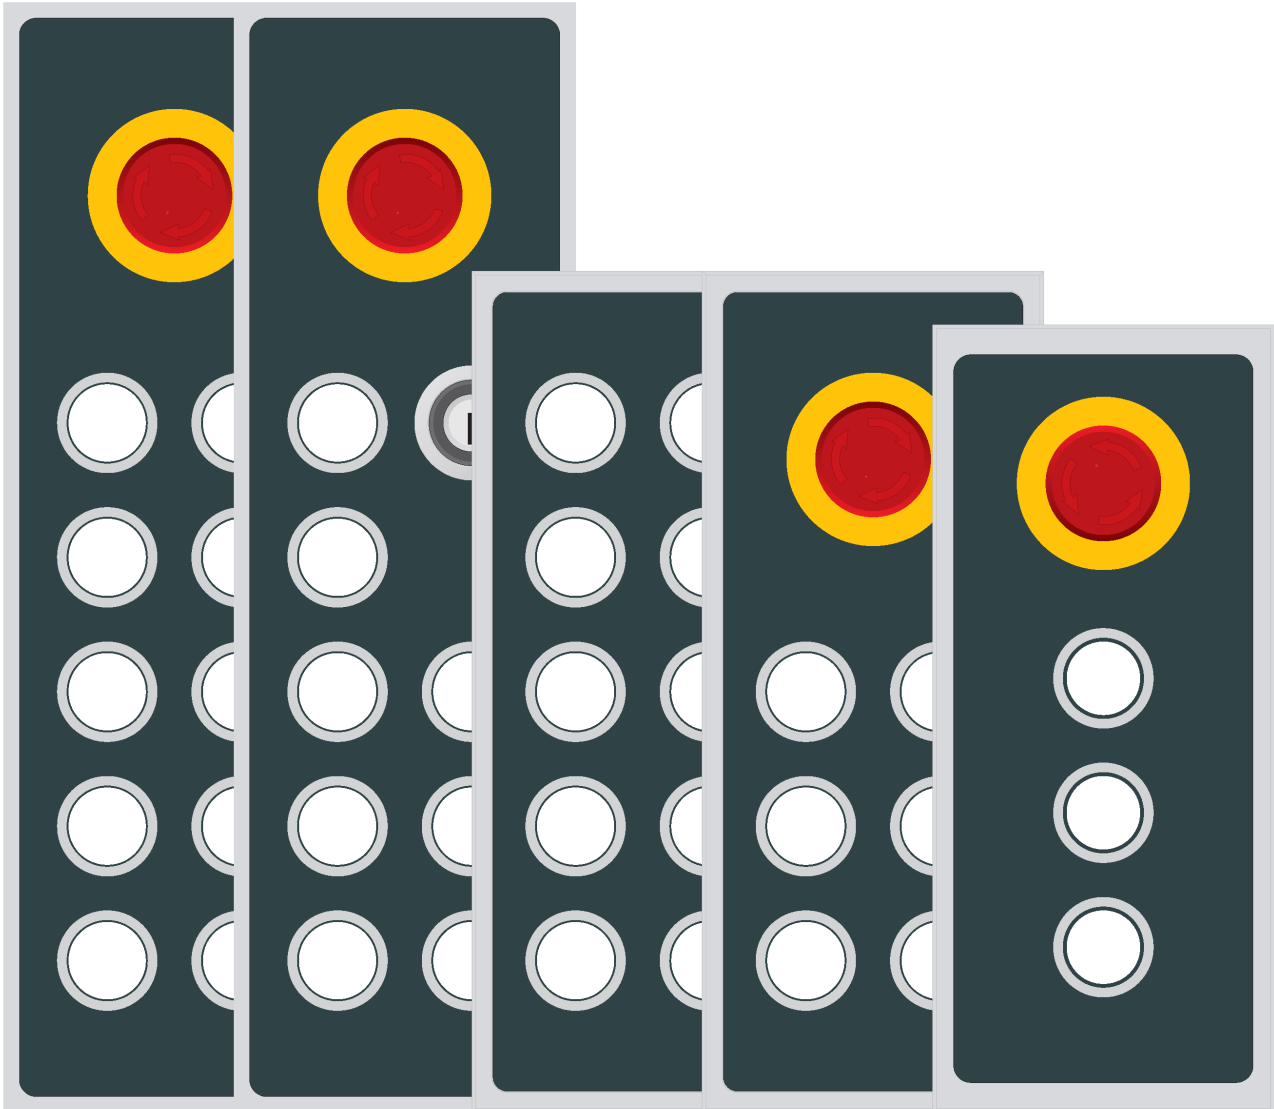


The C9900-Mxxx EtherCAT button modules are decentralized button input modules designed for installation in control cabinets and plants.

The modules, which are implemented in IP65 (front side) and IP40 (rear side), are characterized by the fact that actions or status displays are visible directly on the module. Each light ring of the keys can thus be activated in the colors red, green, blue and white, as a result of which the operator can immediately read off feedback messages that are indicated, for example, by a change of color or by flashing.

The short-stroke keys are located behind an embossed front laminate and can be labeled individually with push-in strips without having to open the devices.

On the rear side all connections are implemented as easily accessible M12 screw connections and can be connected to other EtherCAT devices at distances of up to 100 m using pre-assembled cables. Installation takes place using two clamp straps, which greatly simplifies the assembly.

3.2 Connections

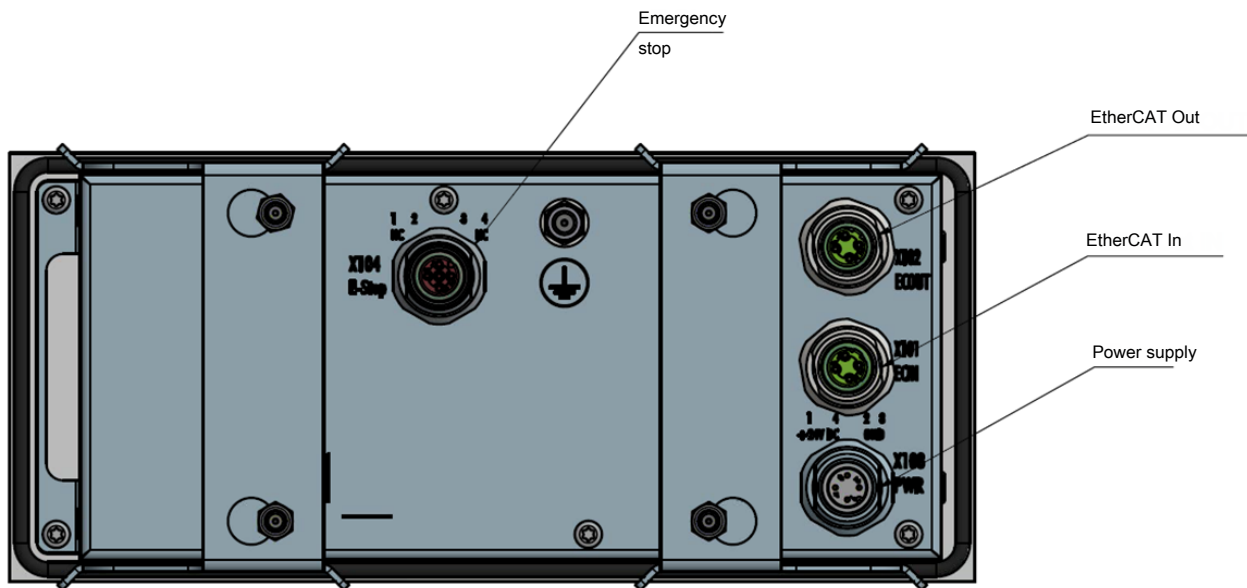

3.2.1 Power supply



Power is supplied to the button module via the 4-pin M12 socket. The protection class of the round connector is equivalent to the IP67 standard.

Pin	Signal	Pin	Signal
1	+24 V DC	3	GND
2	GND	4	24V DC

3.2.2 EtherCAT IN/OUT



The EtherCAT connection is established via the 4-pin M12 socket. The protection class of the round connector is equivalent to the IP67 standard.

Pin	Color	Pin	Color
1	Yellow	3	orange
2	white	4	Blue

3.2.3 Emergency stop connection



The emergency stop in the push-button extension is connected via the 5-pin connector.

Pin assignment (emergency stop)	Description
1	NC 1
2	NC 1
3	NC 2
4	NC 2

3.3 Connection cable

3.3.1 Power cable with 90° 4-pin round connector

Accessories	Description
C9900-K741	Power cable for Control Panel, drag-chain suitable, with 90° 4-pin round connector, 10 m, consisting of: <ul style="list-style-type: none"> - Power cable 2 x 0.75 mm² conforming to UL, cores color-coded - Side A: Round connector 4-pin socket, angled 90° - Side B: not used
C9900-K748	Power cable for Control Panel, drag-chain suitable, with 90° 4-pin round connector, 20 m, consisting of: <ul style="list-style-type: none"> - Power cable 2 x 0.75 mm² conforming to UL, cores color-coded - Side A: Round connector 4-pin socket, angled 90° - Side B: not used




3.3.2 Power cable with 4-pin round connector

Accessories	Description
C9900-K742	Power cable for Control Panel, drag-chain suitable, with 4-pin round connector, 5 m, consisting of: - Power cable 2 x 0.75 mm ² conforming to UL, cores color-coded - Side A: Round 4-pin socket - Side B: not used
C9900-K743	Power cable for Control Panel, drag-chain suitable, with 4-pin round connector, 10 m, consisting of: - Power cable 2 x 0.75 mm ² conforming to UL, cores color-coded - Side A: Round 4-pin socket - Side B: not used
C9900-K744	Power cable for Control Panel, drag-chain suitable, with 4-pin round connector, 20 m, consisting of: - Power cable 2 x 0.75 mm ² conforming to UL, cores color-coded - Side A: Round 4-pin socket - Side B: not used



3.3.3 Power supply plug

Accessories	Description
C9900-P916	Power supply plug for Industrial PC, round connector IP65 with strain relief for the external supply cable

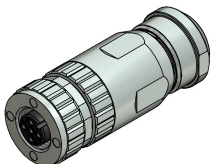


3.3.4 Sensor cable (for emergency stop)

Accessories	Description
ZK2000-6100-0020	Sensor cable, M12 plug, straight, pin, 4-pin, A-coded open end 2 m
ZK2000-6100-0050	Sensor cable, M12 plug, straight, pin, 4-pin, A-coded open end 5 m
ZK2000-6100-0100	Sensor cable, M12 plug, straight, pin, 4-pin, A-coded open end 10 m
ZK2000-6100-0150	Sensor cable, M12 plug, straight, pin, 4-pin, A-coded open end 15 m




3.3.5 Sensor cable 90° (for emergency stop)

Accessories	Description
ZK2000-6300-0020	Sensor cable, M12, angled 90°, pin, 4-pin, A-coded, open end 2 m
ZK2000-6300-0050	Sensor cable, M12, angled 90°, pin, 4-pin, A-coded, open end 5 m
ZK2000-6300-0100	Sensor cable, M12, angled 90°, pin, 4-pin, A-coded, open end 10 m

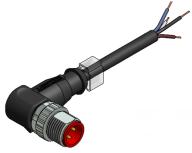

3.3.6 M12 EtherCAT cable for (highly) flexible applications

Accessories	Description
ZK1090-6xxx-xxxx	"See Beckhoff I/O price list"

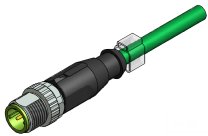

3.4 Accessories

3.4.1 Torque wrench


Accessories	Description
ZB8800	Torque wrench for M8 cables
ZB8800-0001	M12 ratchet attachment
ZB8800-0002	M8 ratchet attachment

3.5 TwinCAT System Manager


All key outputs (red, green and blue) must be set to high (1) in order to activate the light ring in white. Before you can use the device it must first be created in the TwinCAT System Manager.

Proceed as follows:

1. Click at the top in the menu on **File > New > Project** and create a new **TwinCAT XAE Project**.

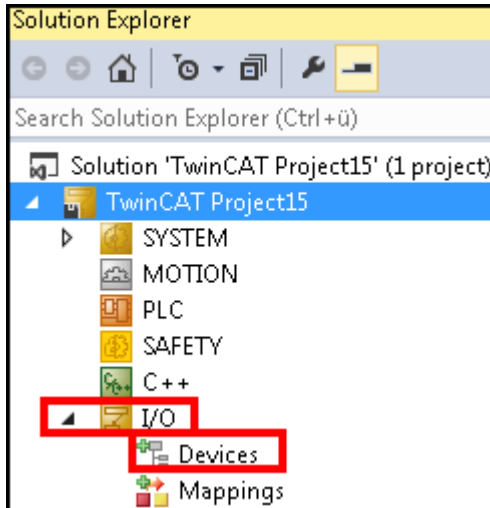


2. In the tree view on the left, click on **I/O** and then right-click on **Device**.
3. In the context menu click on **Scan**.

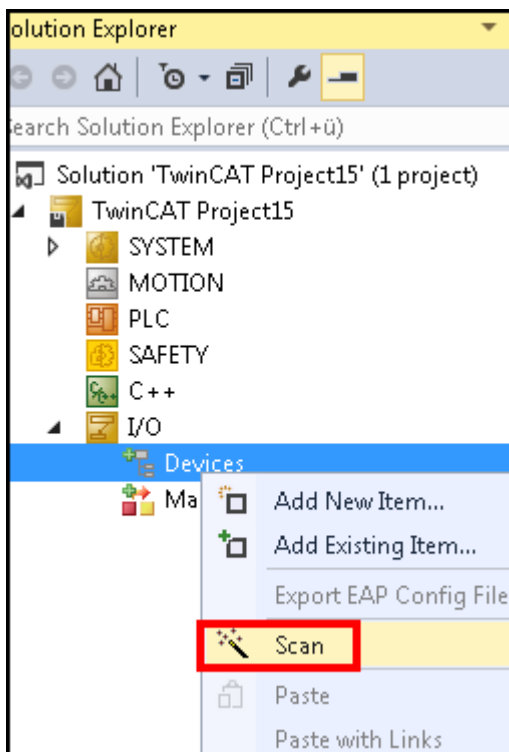


The **New I/O Devices** window appears. All available devices are displayed.

- Select the devices you want to use and confirm the selection with **OK**.

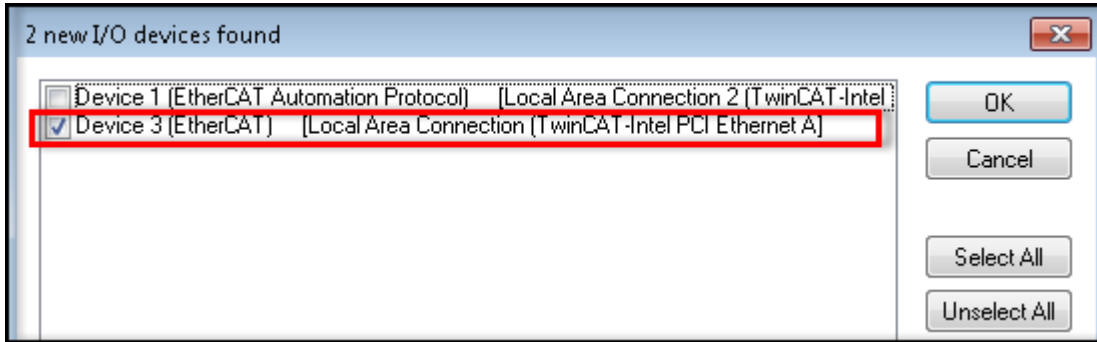

- Confirm the request with **Yes**, in order to look for boxes.

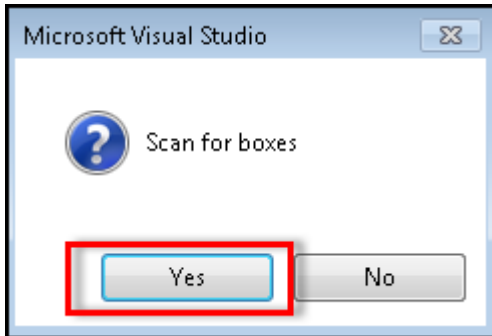


- Confirm the request whether to enable **FreeRun** with **Yes**.

⇒ The device is inserted as a box in the tree view and displayed with the respective inputs and outputs (e.g. Term 2 to 5). Label the inputs and outputs (Term 2 to 5) as follows.

Term label after activating FreeRun	Term label after processing

3.5.1 C9900-M993

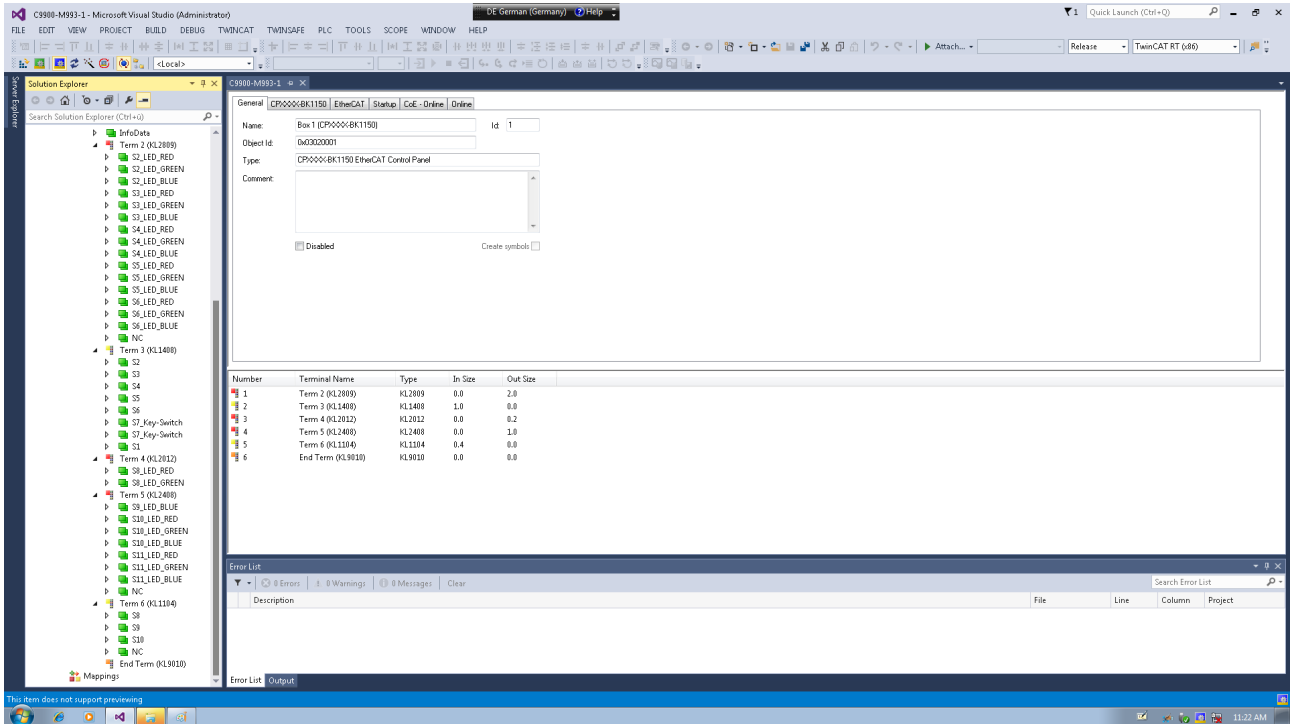

3.5.2 C9900-M994

The screenshot shows the Beckhoff software interface. On the left, the Solution Explorer displays a project structure with four terms (Term 1 to Term 4) and their associated I/O points. The main window shows the configuration for C9900-M994, displaying a table of I/O points.

Name	Online	Type	Size	>Addr...	In/Out	User ID	Linked to
Input	0	BIT	0.1	47.4	Input	0	

Below the table is an Error List window showing 0 Errors, 0 Warnings, and 0 Messages.

The screenshot shows the Beckhoff software interface with the configuration window for C9900-M994 expanded to show detailed settings. The Solution Explorer on the left shows a more complete project structure including Term 5 and an End Term.

The configuration window for C9900-M994 shows the following details:


- General tab selected
- Name: Device 3 (EtherCAT) Id: 3
- Object Id: 0x03010030
- Type: EtherCAT Master
- Comment: (empty)
- Disabled:
- Create symbols:

Below the configuration window is a table showing the connection details:


Number	Box Name	Address	Type	In Size	Out Size	E-Bus (m...)
1	Box 1 (CPXXXX-BK1150)	1001	CPXXXX-BK1150	4.0	6.0	

Below the table is another Error List window showing 0 Errors, 0 Warnings, and 0 Messages.

3.5.3 C9900-M995

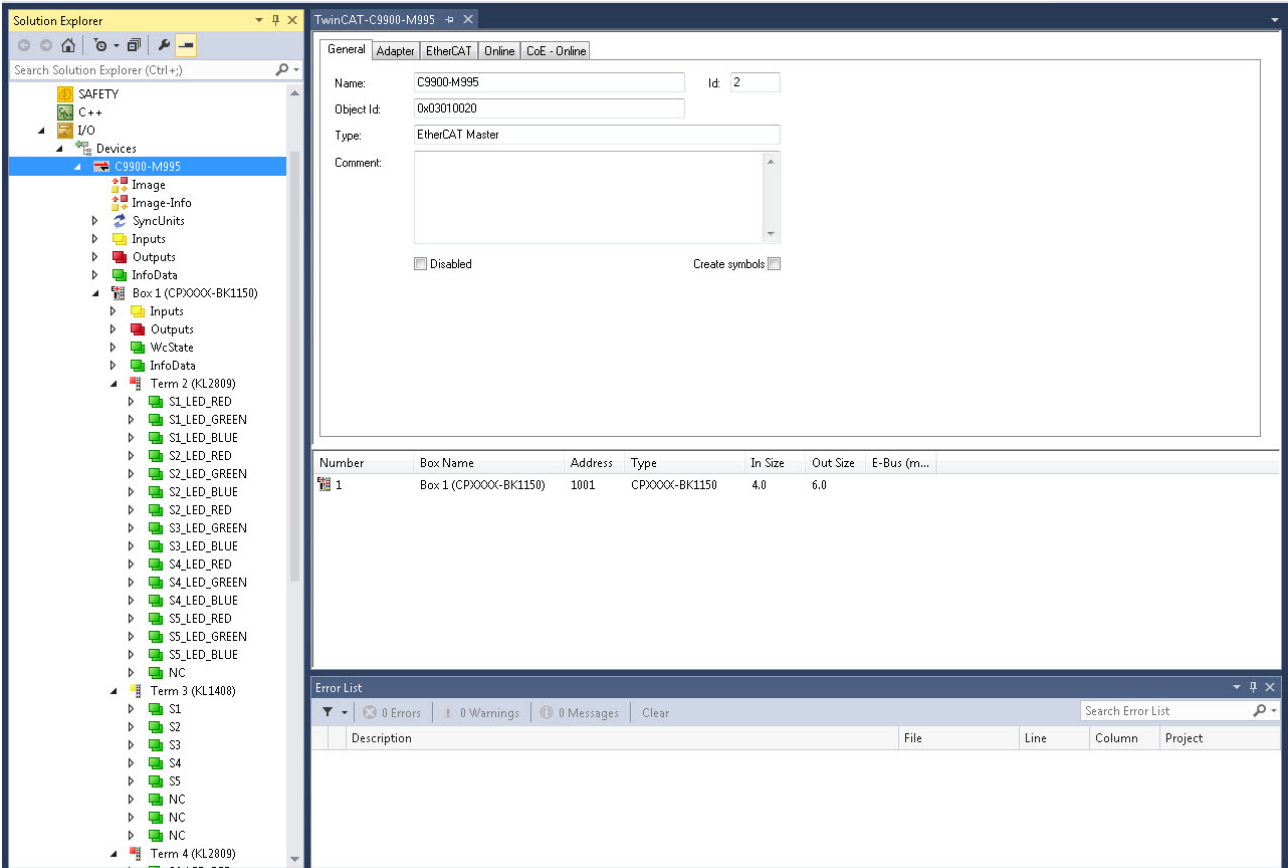


This item does not support previewing

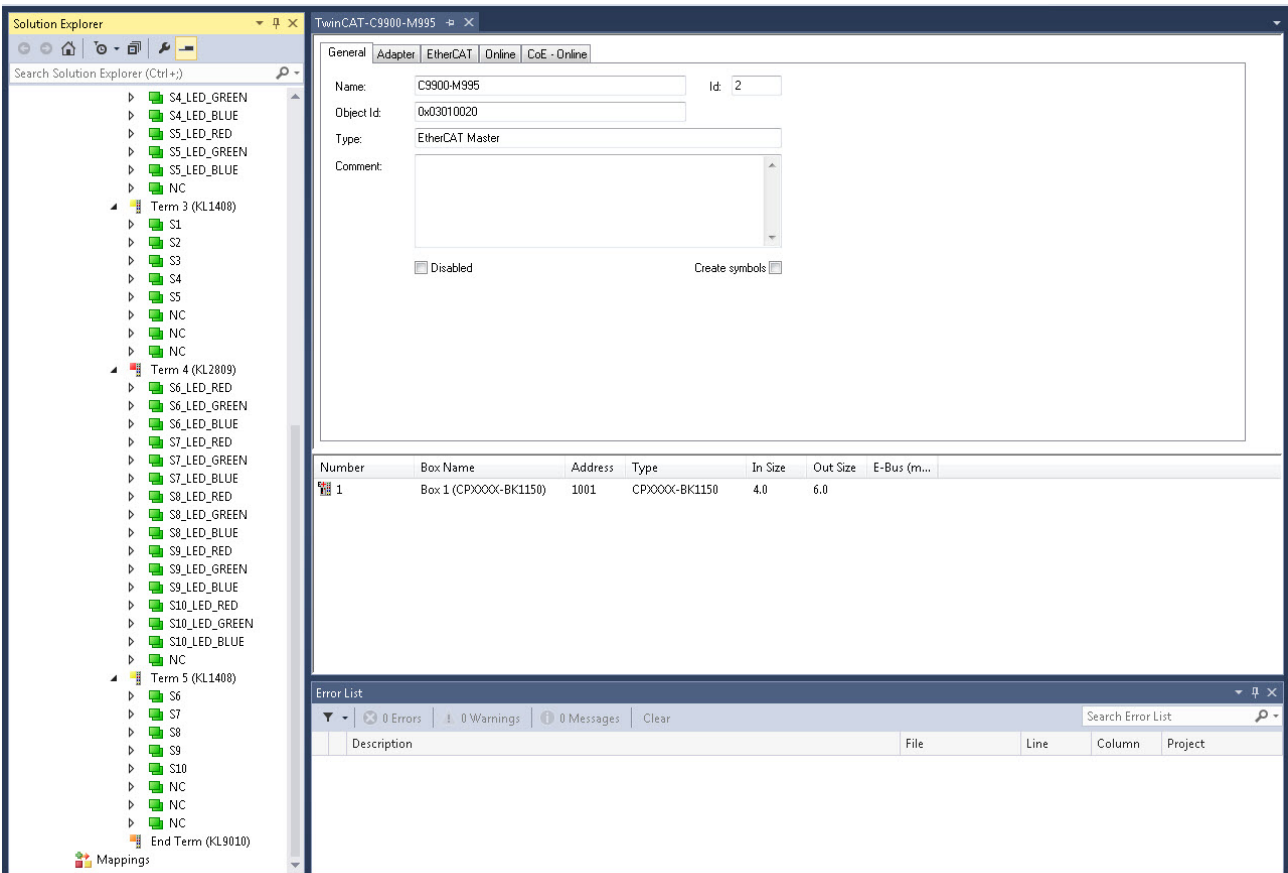


This item does not support previewing

3.5.4 C9900-M997

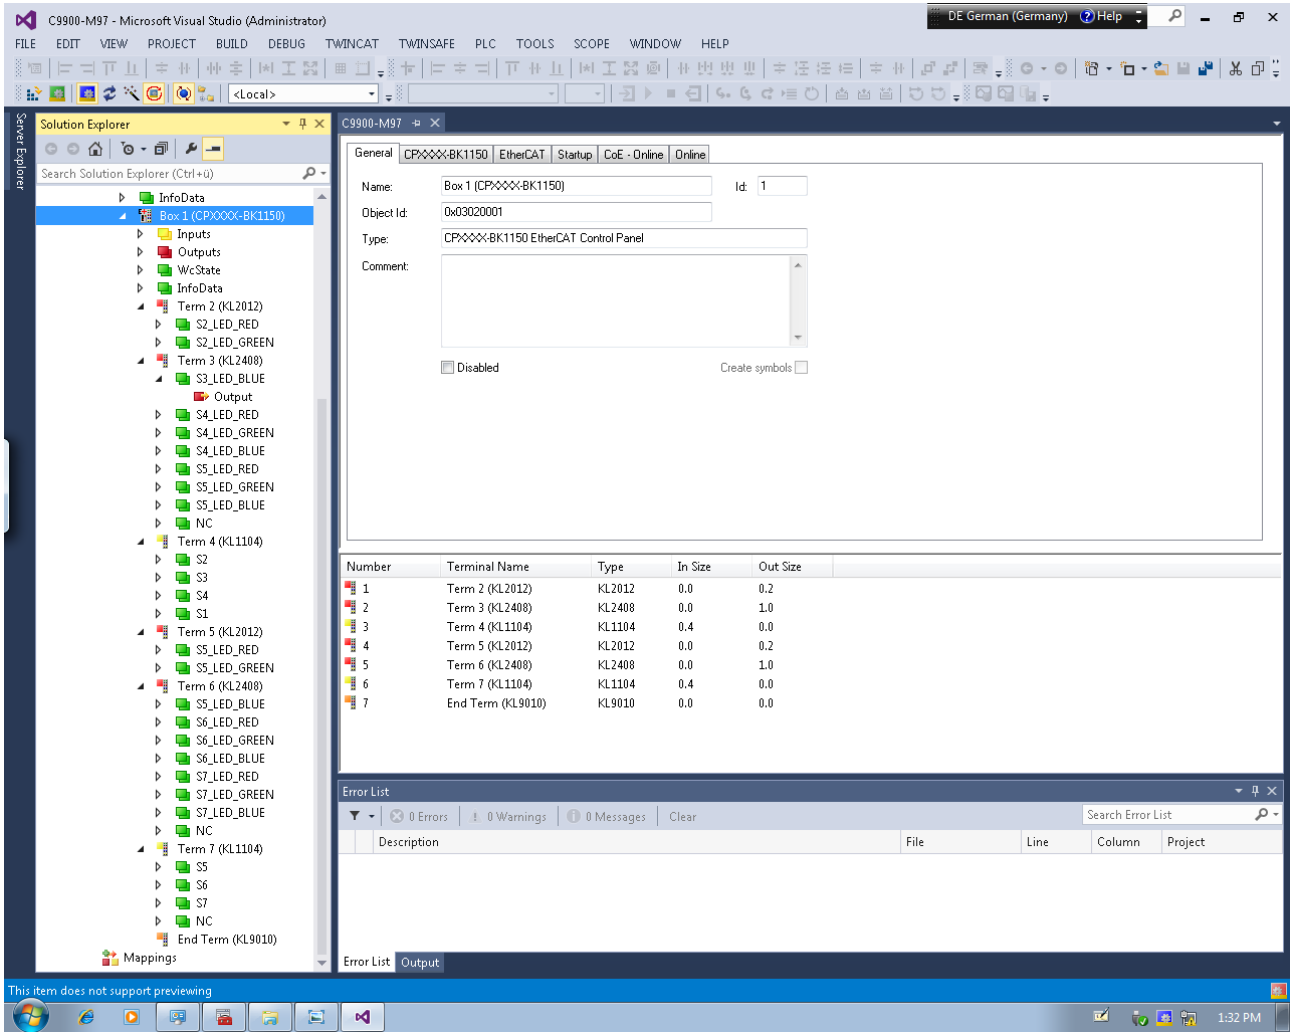


3.5.5 C9900-M899

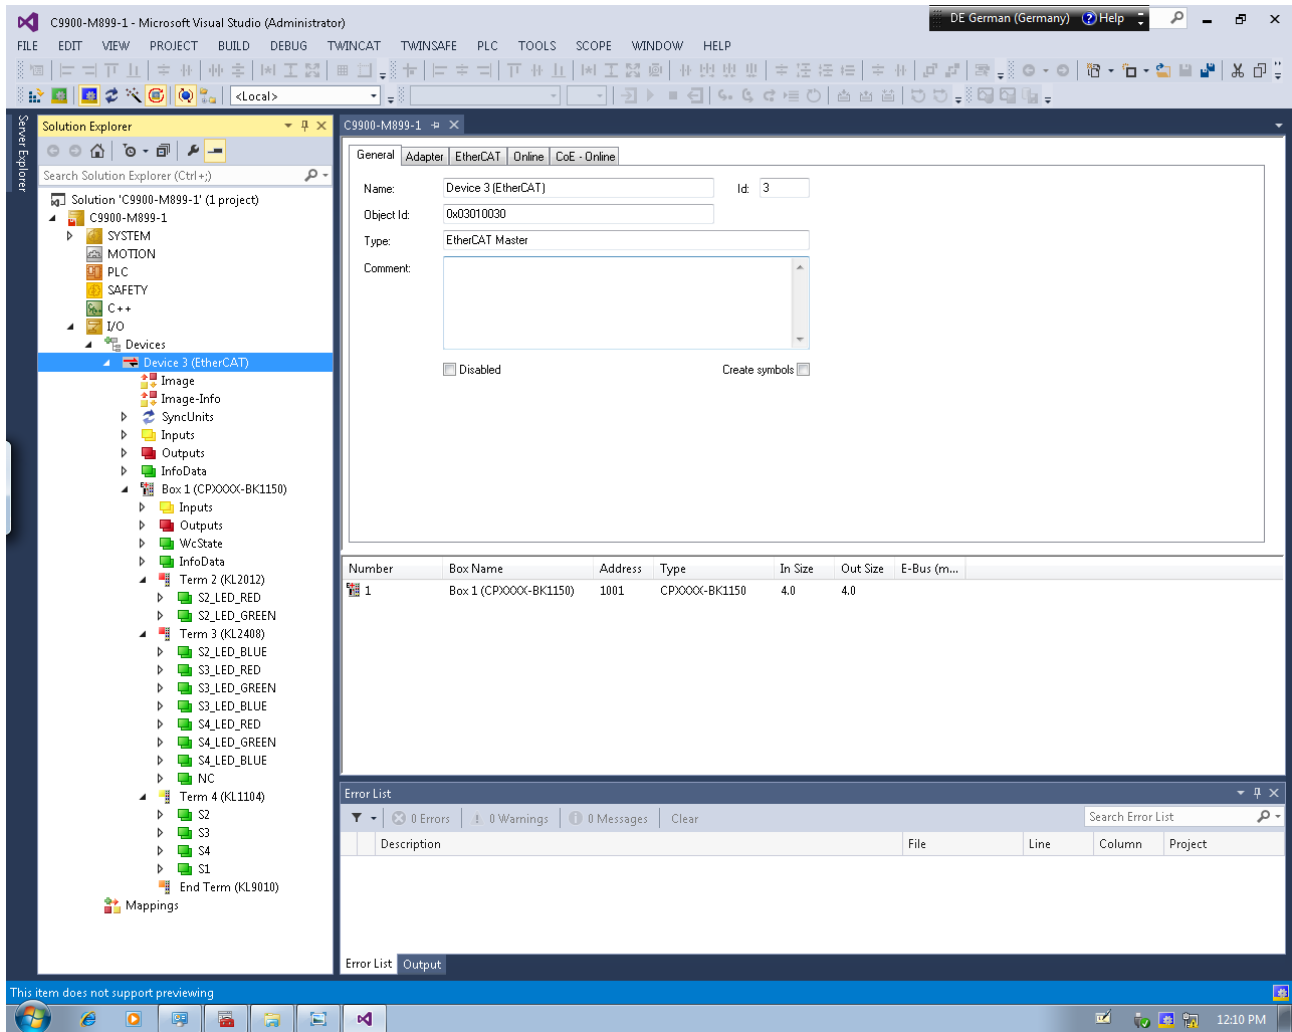

4 Mounting

4.1 Mounting the clamp straps

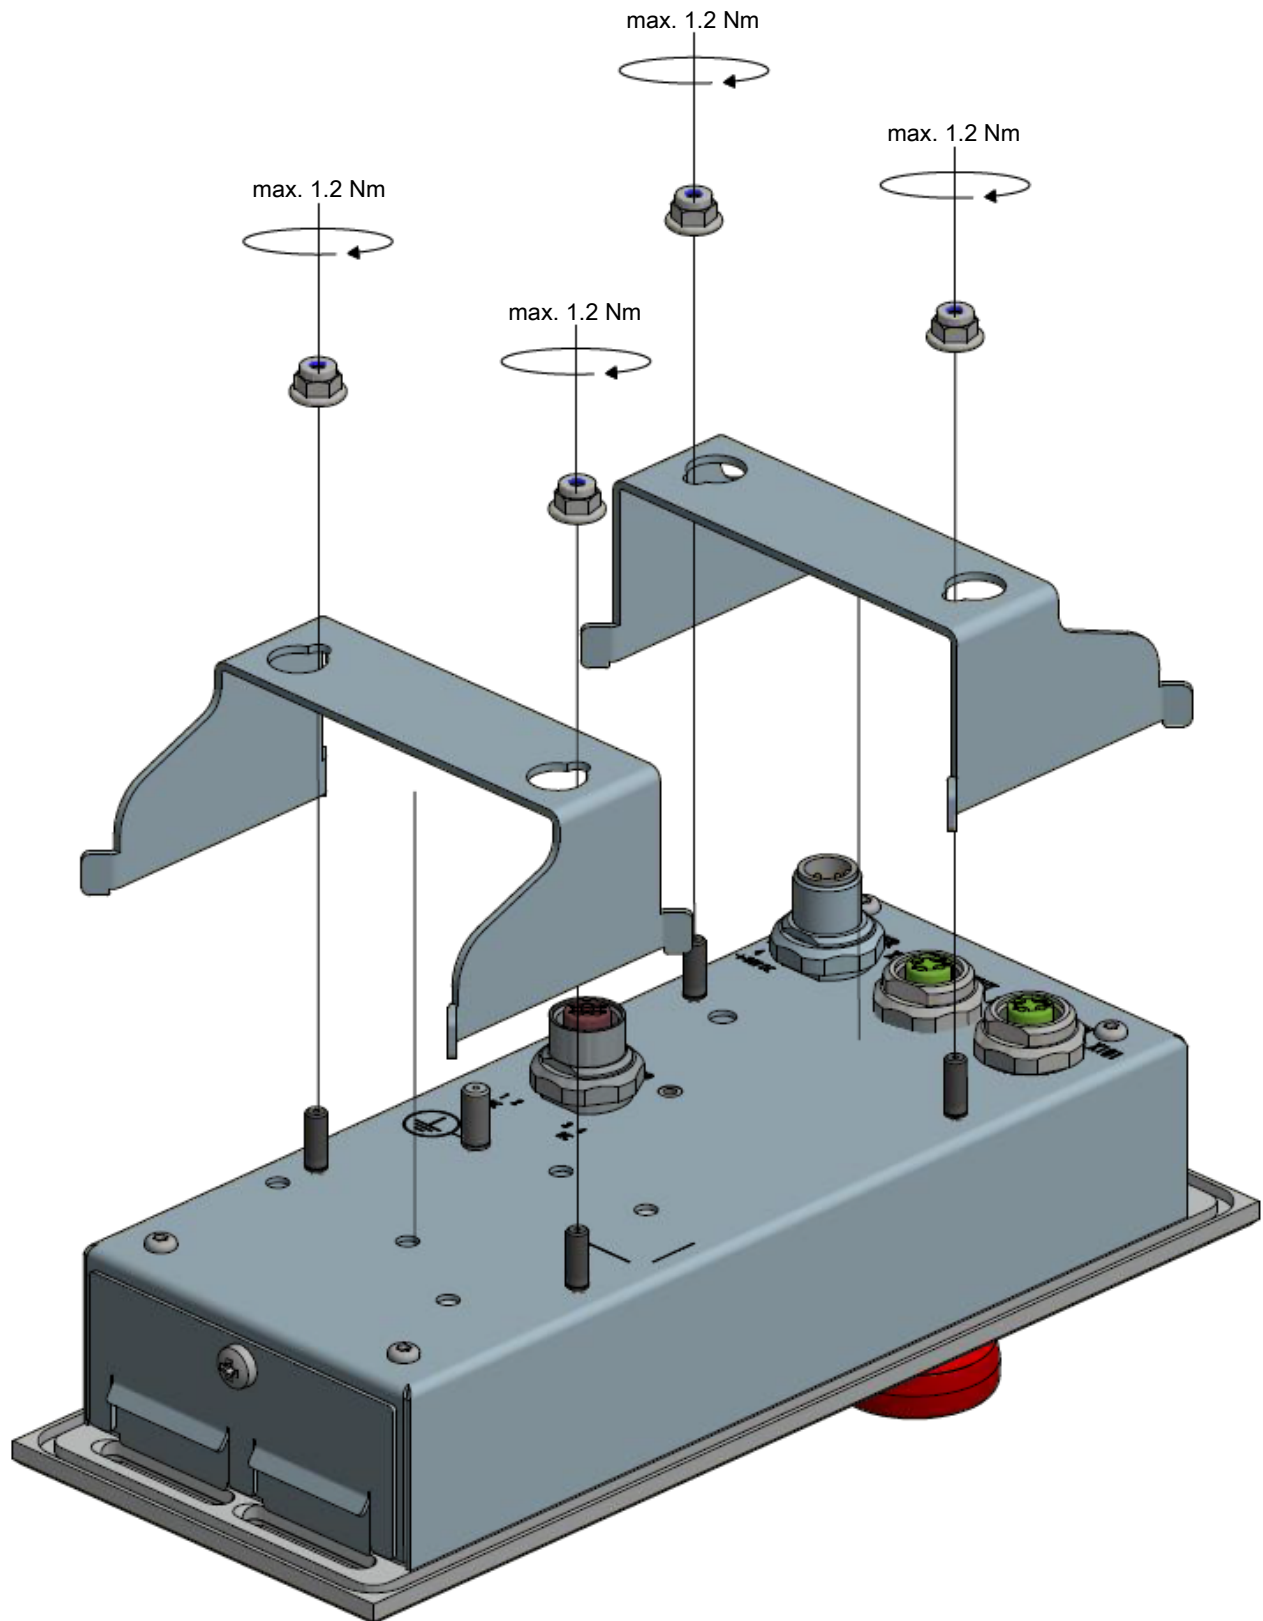


Max. wall thickness 4 mm

4.2 Mounting the push-in strips




The ordered push-in strips are fixed behind the clamping plate.


4.3 Push-in strips

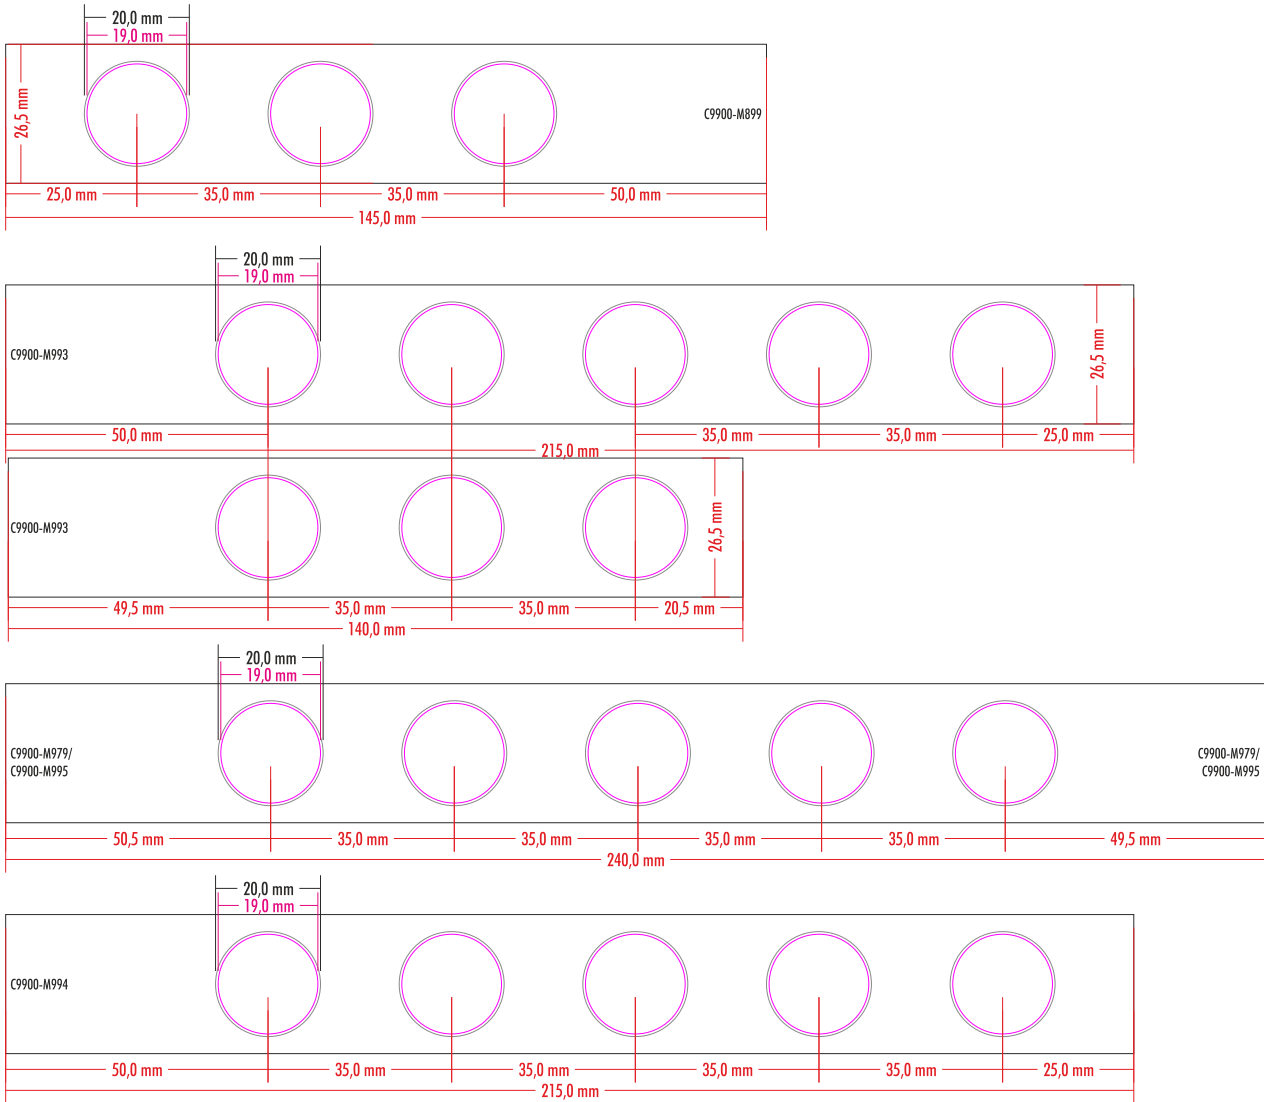


5.2 C9900-M993

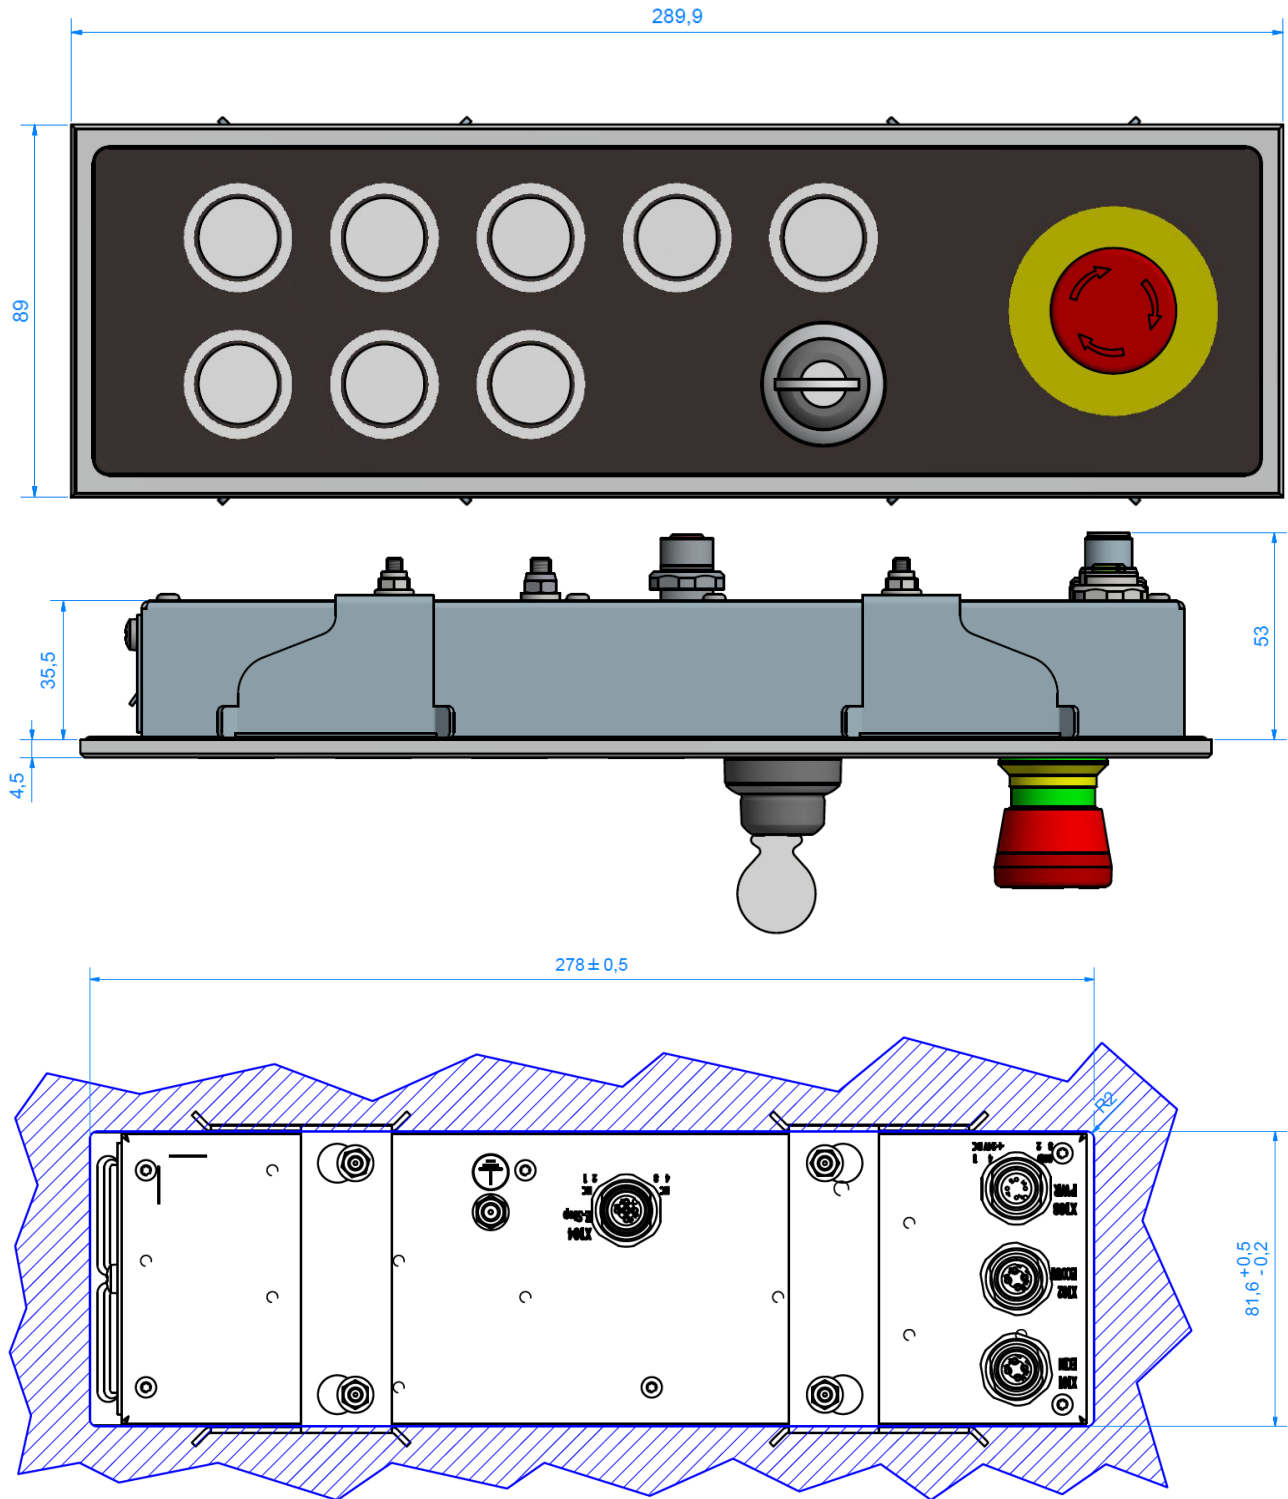


5.3 C9900-M994

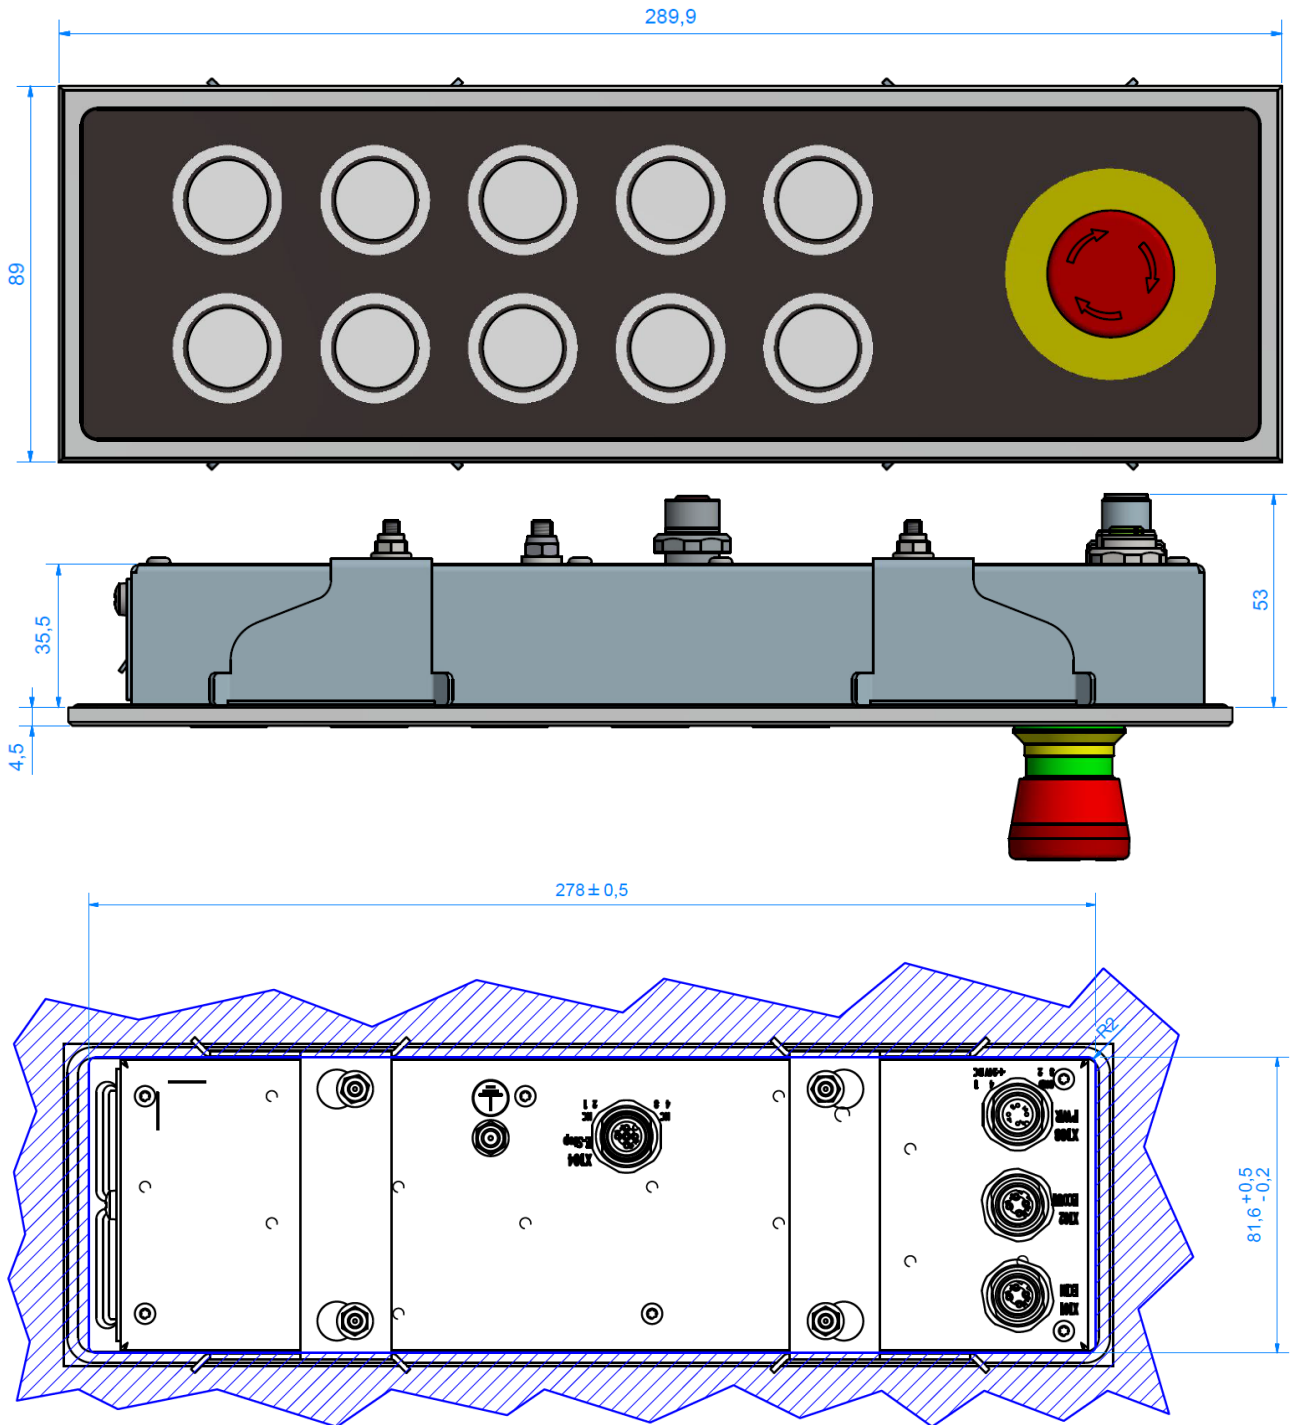

5.4 C9900-M995

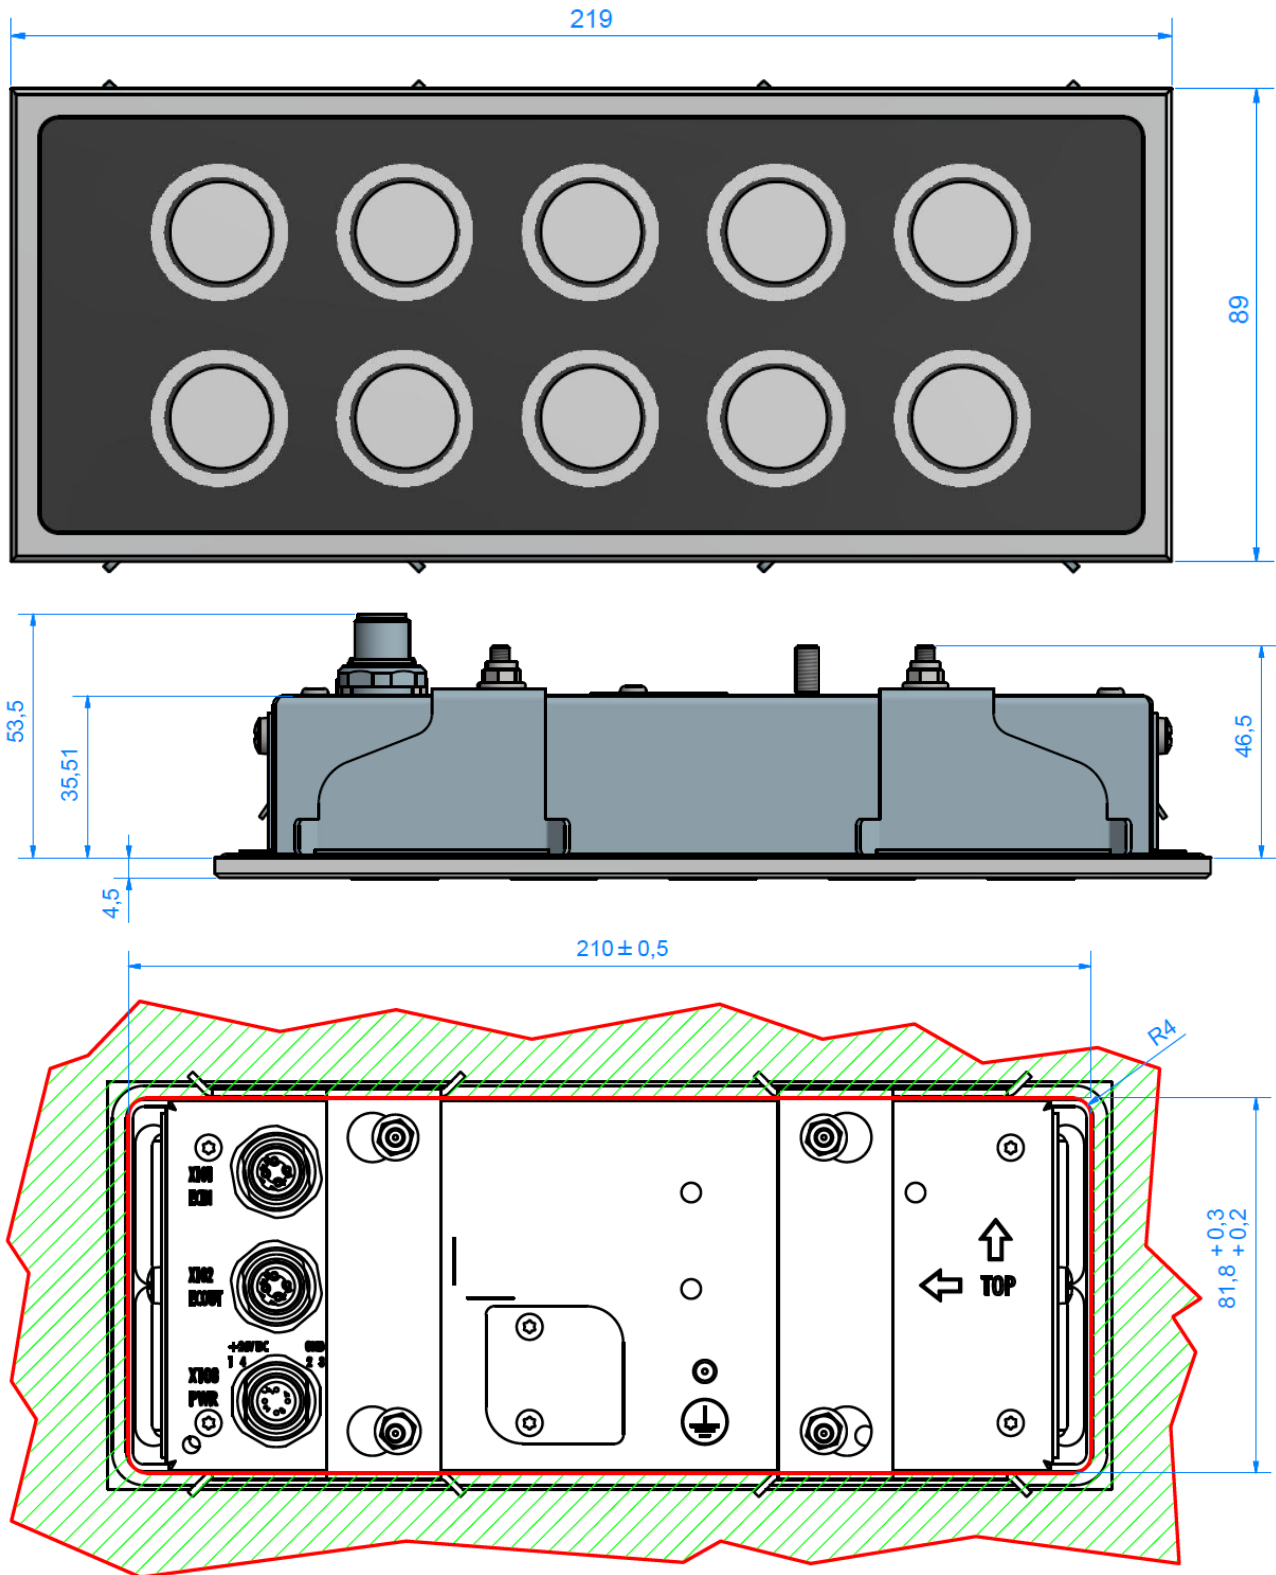

5.5 C9900-M997

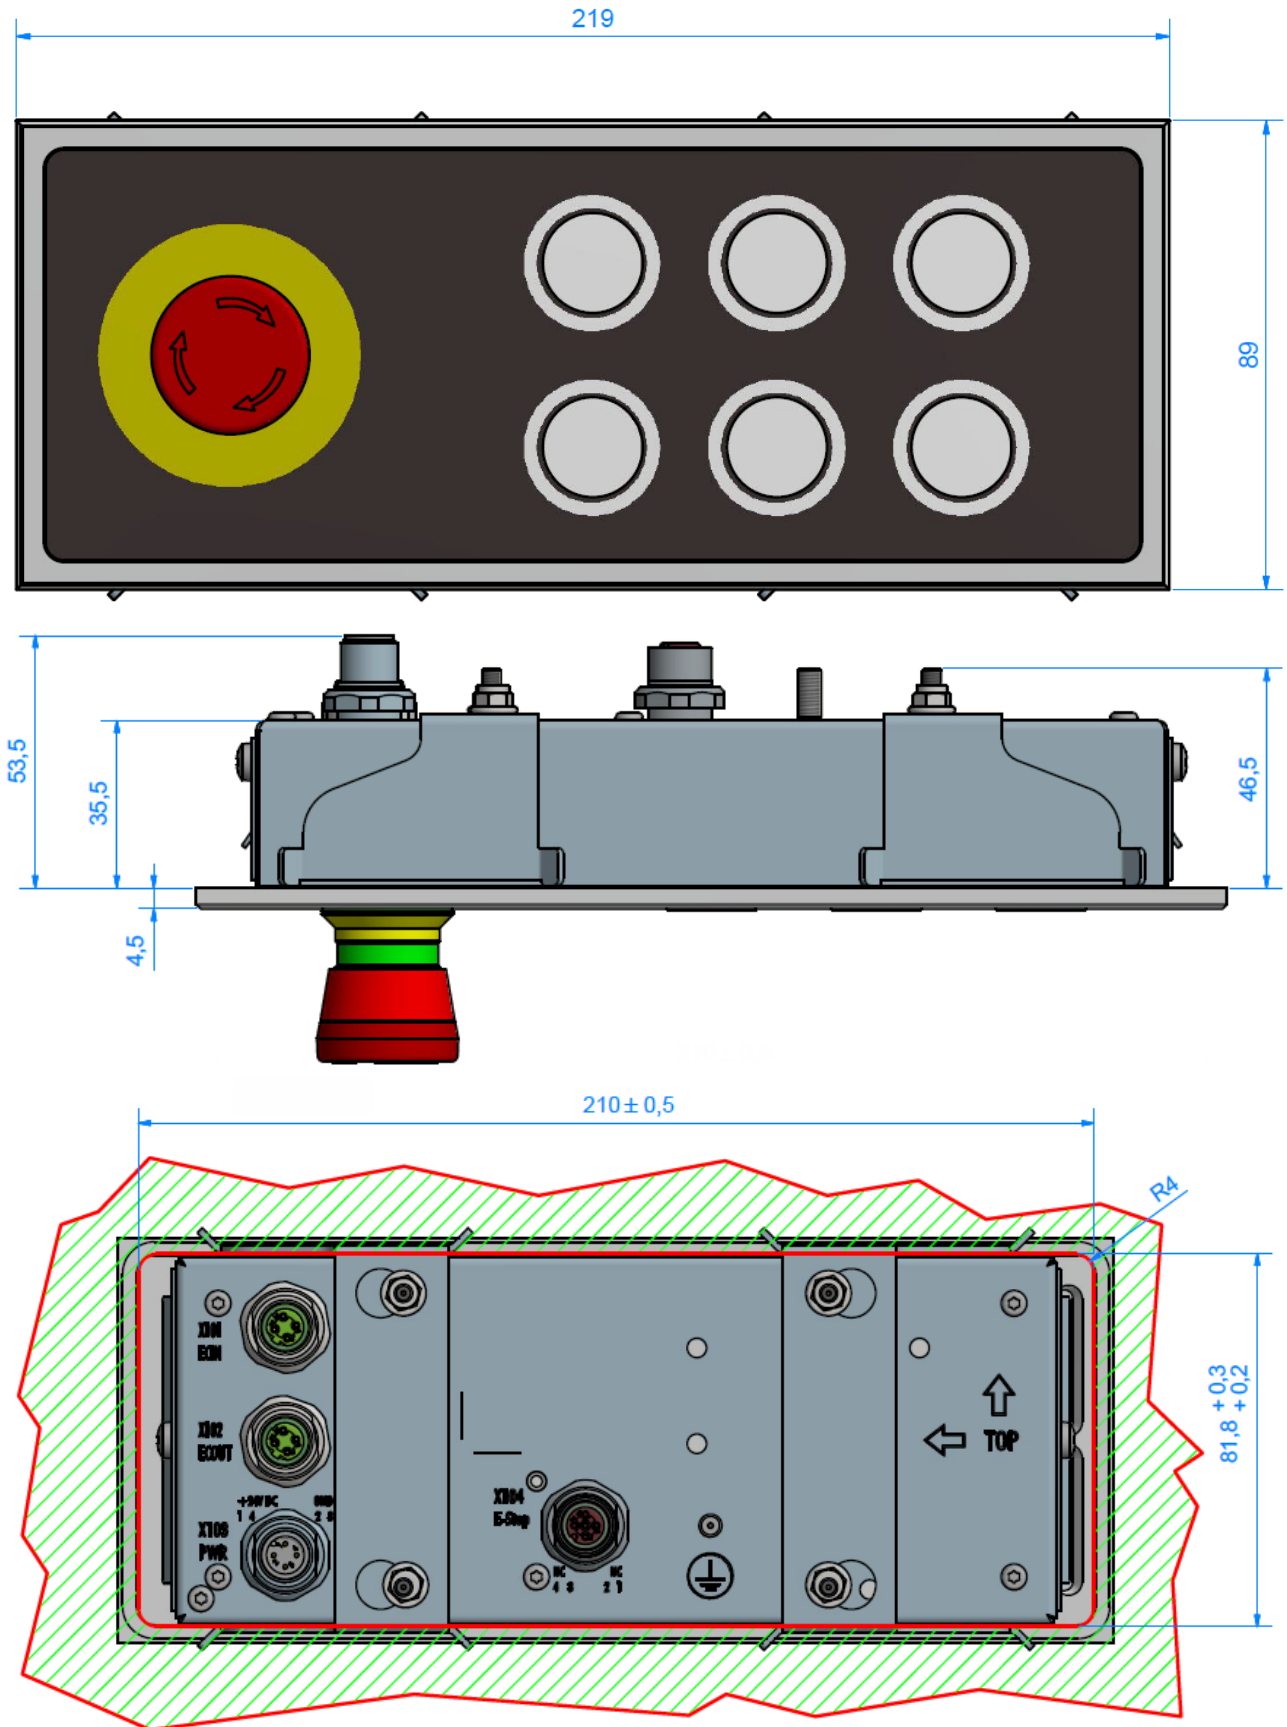

6 Technical data

⚠ DANGER

Risk of explosion!

The button modules must not be used in potentially explosive atmospheres!

Properties	Description	
Dimensions	See chapter Dimensions [▶ 23]	
Ordering information	C9900-M993	- 1 x emergency stop (Rafix 22FS+) - 8 x short-stroke keys - 1 x twist lock
	C9900-M994	- 1 x emergency stop (Rafix 22FS+) - 10 x short-stroke keys
	C9900-M995	- 10 x short-stroke keys
	C9900-M997	- 1 x emergency stop (Rafix 22FS+) - 6 x short-stroke keys
	C9900-M899	- 1 x emergency stop (Rafix 22FS+) - 3 x short-stroke keys
Interfaces	M12 socket, 4-pin, D-coded	
	EtherCAT In	EtherCAT Out
	M12 socket, 4-pin, A-coded	
	Emergency stop (except C9900-M995)	
	M12 plug, 4-pin, A-coded	
	Power supply	
Max. cable length	100 m (100BASE-Tx) for EtherCAT In/ Out	
Data transfer rate	100MBit	
Data transfer medium	Industrial Ethernet cable, shielded, at least CAT.5	
LED ring lighting of the keys	Red, green, blue, white	
Emergency stop type	1.30.273.511/0030 Rafix 22FS+	
	The emergency stop is reset by rotating.	
Switching elements (emergency stop)	1.20.126.414/0000	1 x make contact / 2 x break contact
	Min. operating voltage AC / DC	5 V
	Max. operating voltage AC / DC	35 V
	Min. operating current AC / DC	1 mA
	Max. operating current AC / DC	100 mA
	Switching capacity max.	250 mW
Key switch (C9900-M993)	Angle of rotation	1 x 90°, L-shape
	Removal position	0+1
	Contact element	2 x make contact EtherCAT
Short-stroke keys	Rafix Micon 5	1 x make contact via EtherCAT
Electrical properties	Power supply	24 V DC (-15% / +20%)
	Power consumption	Max. 7.2 W
	Voltage range	20.4- 28.8 VDC
	Current consumption	Max. 300 mA (at rated voltage)
Protection class	Front side IP65, rear side IP40	

Properties	Description	
Weight	C9900-M993	Approx. 980 g
	C9900-M994	Approx. 980 g
	C9900-M995	Approx. 790 g
	C9900-M997	Approx. 710 g
	C9900-M899	Approx. 670 g
Operating temperature	Operation	0...50°C
	Storage	-20 °C to +60 °C
	Transport	-20 °C to +60 °C
Permissible relative air humidity	95%, no condensation	
Certification	CE	

7 Support and Service

Beckhoff and their partners around the world offer comprehensive support and service, making available fast and competent assistance with all questions related to Beckhoff products and system solutions.

Beckhoff's branch offices and representatives

Please contact your Beckhoff branch office or representative for local support and service on Beckhoff products!

The addresses of Beckhoff's branch offices and representatives round the world can be found on her internet pages:

<http://www.beckhoff.com>

You will also find further documentation for Beckhoff components there.

Beckhoff Headquarters

Beckhoff Automation GmbH & Co. KG

Huelshorstweg 20
33415 Verl
Germany

Phone: +49(0)5246/963-0
Fax: +49(0)5246/963-198
e-mail: info@beckhoff.com

Beckhoff Support

Support offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with other, wide-ranging services:

- support
- design, programming and commissioning of complex automation systems
- and extensive training program for Beckhoff system components

Hotline: +49(0)5246/963-157
Fax: +49(0)5246/963-9157
e-mail: support@beckhoff.com

Beckhoff Service

The Beckhoff Service Center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline: +49(0)5246/963-460
Fax: +49(0)5246/963-479
e-mail: service@beckhoff.com